



www.intelligent-identification.com

Version 1.2




Getting started with ICU Pro

- 01.** Plug the USB C cable and USB camera into your ICU Pro



- 02.** Plug the USB cable into your PC (we recommend Windows 10) and plug in power

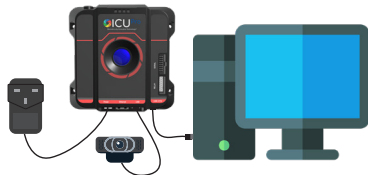


After 90 seconds the LED will flash blue your ICU Pro is now ready to use

- 03.** The Device will appear on your PC as an external storage device

- 04.** A Windows application called IMS_Local is stored on your ICU Pro



- 05.** Install the application. Start the program. Your login page will appear

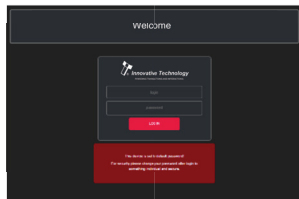

Enter the following details

Username: *admin*
Password: *admin123*

- 06.** Your device is set to Demonstration *Running Mode* by default

You can now test the full features of the device using this mode

Cloud Option

If you have an **IMS_CLOUD** account you can register this device to your account. Switch to this *running mode* and enter your account details when prompted

If you don't have your account details, please contact us

Device Integration

To intergrate with your software please switch to **Device_API Running Mode** (see API documentation in manuals folder stored on the device)

You can change the *Running Mode* of the device by:

- 1) Click on **Running Modes**
- 2) Choose your preferred option
- 3) Your ICU Pro will restart

If you have any questions, please email:
support@innovative-technology.com